



Time Tailor® QWERTY Guide



FUNCTION	DESCRIPTION	KEYSTROKE
TIME MACHINE DIALOG	Opens the Fastrack/Time Machine Dialog.	Ħ
SEARCH TO IN-POINT	Cue VTR to the <u>first</u> frame of the selected Event.	N
SEARCH TO OUT-POINT	Cue VTR to the <u>last frame</u> of the selected Event.	Shift
PLAY	Play the selected VTR from its current position.	C
2X PLAY	Play the selected VTR 2X (twice) play speed.	CC
PLAY REVERSE	Play the selected VTR in reverse from its current position.	Shift
2X PLAY REVERSE	Play the selected VTR in <u>reverse</u> 2X (twice) speed.	Shift C C
STOP	Stop the selected VTR.	V
REWIND	Rewind the selected VTR (shuttle).	Z
FAST FORWARD	Fast Forward the selected VTR (shuttle).	X
STEP FORWARD	Increment selected VTR forward frame-by-frame.	Ctrl →
STEP REVERSE	Increment selected VTR <u>backwards</u> frame-by-frame.	Ctrl ←
MOVE UP	Select (highlight) the Track directly above the selected Track.	1
MOVE DOWN	Select (highlight) the Track directly below the selected Track.	I
MOVE LEFT	Move one Point-of-interest to the left.	—
MOVE RIGHT	Move one Point-of-interest to the right.	₽
MARK VTR IN-TIME	Make the current VTR position the new Event IN-time.	M
MARK VTR OUT-TIME	Make the current VTR position the new Event OUT-time.	[5]
SET VTR IN-TIME	Enter new In-time on the num. keypad for the selected VTR. Press [ENTER].	Num Lock
SET VTR OUT-TIME	Enter a new Out-time on the num. keypad for the selected VTR. Press [ENTER].	1
SET EVENT DURATION	Enter a new Duration on the numeric keypad for the selected VTR. The Out-time is calculated automatically. Press [ENTER].	Page Up
TRIM VTR IN-TIME	Manually trim the current In-time of the selected VTR (+ or -). Press [ENTER].	*
TRIM VTR OUT-TIME	Manually trim the current Out-time of the selected VTR (+ or -). Press [ENTER].	
TIMELINE ON/OFF	Toggle the blue Timeline line On or Off.	A